

OPERATING AND PROGRAMMING INSTRUCTIONS

Gemini Digital:- 3700



FUNCTION	MODE		KEY SEQUENCE	NOTES			
	PUBLIC	PRIVATE					
MASTER CODE FUNCTIONS - for steps 1-3 please enter the relevant numbers in the sequence shown below							
			STEP 1	STEP 2	STEP 3		
CHANGE MASTER CODE	✓	✓	[I#] [Old Master Code]	01	[New Master Code] [New Master Code]	MASTER CODE IS EIGHT DIGITS	
CHANGE USER CODE		✓	[#] [Master Code]	02	[New User Code]	USER CODE IS FOUR DIGITS	
DELETE USER CODE	✓		[Master Code]			OPENS LOCK AND DELETES USER CODE	
SET / CHANGE SUB-MASTER CODE	✓	✓	[#] [Master Code]	03	[New Sub-Master Code]	SUB-MASTER CODE IS SIX DIGITS	
DELETE SUB-MASTER CODE	✓	✓	[#] [Master Code]	07		DELETES SUB-MASTER CODE	
OPEN LOCK	✓	✓	[Master Code]			DELETES USER CODE IN PUBLIC MODE	
CLOSE LOCK		AUTO				RE-LOCKS AUTOMATICALLY AFTER 4 SECONDS	
SET PUBLIC MODE		✓	[#] [Master Code]	08		DELETES ALL EXISTING USER CODES	
SET PRIVATE MODE	✓		[#] [Master Code]	09	[New User Code]	DELETES ALL EXISTING USER CODES	
SET TECHNICIAN MODE	✓		[#] [Master Code]	10	[New Technician Code]	TECHNICIAN CODE IS SIX DIGITS	
REMOVE TECHNICIAN MODE	✓		[#] [Master Code]	11		DELETES TECHNICIAN CODE	
SET AUTO-TIMED UNLOCK ON & SET TIME	✓		[#] [Master Code]	16	[Time Code]	SEE NOTES ON TIMERS BELOW	
SET AUTO-TIMED UNLOCK OFF	✓		[#] [Master Code]	17		UNIT WILL NOT OPEN AUTOMATICALLY	
RE-LOCK TIME		✓	[#] [Master Code]	23	[Enter chosen time length]	1 = 8 SECONDS, 2 = 16 SECONDS, 3 = 32 SECONDS 4= 40 SECONDS, 5= 50 SECONDS, 6= 60 SECONDS	
LOCK OUT MODE	✓		[#] [Master Code]	24		IF USER GETS CODE WRONG 5 TIMES - 8 SECOND TIME OUT	
REMOVE LOCK OUT MODE	✓		[#] [Master Code]	25			
SET AUTO-TIMED CODE CANCEL ON & SET TIME	✓		[#] [Master Code]	26	[Time Code]	DISABLES USER CODE AFTER SET TIME - SEE NOTES ON TIMERS	
SET AUTO-TIMED CODE CANCEL OFF	✓		[#] [Master Code]	27		UNIT WILL NO LONGER CANCEL USER CODE	
SUB-MASTER CODE FUNCTIONS - for steps 1-3 please enter the relevant numbers in the sequence shown below							
CHANGE USER CODE		✓	[#] [Sub-Master Code]	02	[New User Code]	USER CODE IS FOUR DIGITS	
CHANGE SUB MASTER CODE	✓	✓	[#] [Sub-Master Code]	03	[New Sub-Master Code]	SUB-MASTER CODE IS SIX DIGITS	
DELETE USER CODE	✓		[Sub-Master Code]			OPENS LOCK AND DELETES USER CODE	
OPEN LOCK	✓	✓	[Sub-Master Code]			DELETES USER CODE IN PUBLIC MODE	
CLOSE LOCK		AUTO				RE-LOCKS AUTOMATICALLY AFTER 4 SECONDS	
USER CODE FUNCTIONS - for steps 1-3 please enter the relevant numbers in the sequence shown below							
CHANGE USER CODE		✓	[#] [Old User Code]	02	[New User Code] [New User Code]	USER CODE IS FOUR DIGITS	
OPEN LOCK	✓	✓	[User Code]				
CLOSE LOCK	✓		[User Code]			WHEN SINGLE USER CODE ENTRY MODE IS SET	
CLOSE LOCK	✓		[User Code] [User Code]			WHEN DOUBLE USER CODE ENTRY MODE IS SET	
CLOSE LOCK		AUTO				RE-LOCKS AUTOMATICALLY AFTER 4 SECONDS	
TECHNICIAN CODE FUNCTIONS							
OPEN LOCK	✓		[Technician Code]			DOES NOT DELETE USER CODE	
CLOSE LOCK	AUTO					RE-LOCKS AUTOMATICALLY AFTER 4 SECONDS	
FUNCTIONS AVAILABLE TO ALL CODES							
BATTERY CHECK	✓	✓	[#] [#]			REPLACE BATTERIES IF RED LIGHT SHOWS	
NOTES				TIMER FUNCTIONS - TIME CODE EXAMPLES		BATTERY CONDITION INDICATOR	
ALL ACCEPTABLE BUTTON PRESSES ARE SIGNIFIED BY A GREEN LIGHT.				TIME CODE	001	1 MIN	GREEN LIGHT - EXCELLENT
				TIME CODE	010	10 MINS	AMBER LIGHT - GOOD
INCOMPLETE FUNCTIONS "TIME-OUT" AFTER 4 SECONDS.				TIME CODE	030	1/2 HR	RED LIGHT - LOW
				TIME CODE	060	1 HR	
ERRORS AND "TIME-OUTS" ARE SIGNIFIED BY FLASHING RED LIGHT.				TIME CODE	480	8 HRS	RED LIGHT - CHANGE BATTERIES AS SOON AS POSSIBLE
				TIME CODE	720	12 HRS	
FOLLOWING AN ERROR OR "TIME-OUT", UNIT REVERTS TO PREVIOUS SETTINGS.				TIME CODE	999	16 HRS 39 MINS (MAXIMUM)	FLASHING RED LIGHT PRIOR TO LOCK OR UNLOCK INDICATES LOW BATTERY VOLTAGE CHANGE BATTERIES AS SOON AS POSSIBLE
TIME CODES ARE 3-DIGIT CODES CORRESPONDING TO THE NUMBER OF MINUTES.				ALL TIMES ARE APPROXIMATE +/- 5%			
MASTER CODE (8 digits)		SUB MASTER CODE (6 digits) (No Default)			USER CODE (4 DIGITS)		
MASTER CODE (8 digits)		SUB-MASTER CODE (6 digits) (No Default)			USER CODE (4 digits)		
□□□□□□□□		□□□□□□			□□□□		
ENSURE THAT YOU CHANGE THE DEFAULT MASTER CODE TO YOUR OWN MASTER CODE AND KEEP A SAFE RECORD - IT IS NOT POSSIBLE TO PROGRAM THE LOCK WITHOUT IT							

Euro-Locks SA NV (Belgium)
E: sales@euro-locks.be
T: +32 61 212.261

Euro-Locks SA (France)
E: euro-locks@euro-locks.fr
T: +33 (0)3.87.92.61.11

Euro-Locks Sicherheitseinrichtungen GmbH (Germany)
E: vertrieb@euro-locks.de
T: +49 (0) 6897 9072 0

Euro-Locks Sp. z o. o. (Poland)
E: sekretariat@euro-locks.pl
T: +48 (32) 344-78-70, -82, -84