

OPERATING AND PROGRAMMING INSTRUCTIONS

Keypad Digital Combination Lock Range : 3760



FUNCTION	MODE		KEY SEQUENCE	NOTES		
	PUBLIC	PRIVATE				
MASTER CODE FUNCTIONS						
			STEP 1	STEP 2	STEP 3	
CHANGE MASTER CODE	✓	✓	[#] [Old Master Code]	01	[New Master Code] [New Master Code]	MASTER CODE IS EIGHT DIGITS.
CHANGE USER CODE		✓	[#] [Master Code]	02	[New User Code]	USER CODE IS FOUR DIGITS.
OPEN LOCK	✓	✓	[Master Code]			DELETES USER CODE IN PUBLIC MODE
CLOSE LOCK		AUTO				RE-LOCKS AUTOMATICALLY AFTER 4 SECONDS
SET PUBLIC MODE (FOUR DIGIT CODES)		✓	[#] [Master Code]	08		DELETES ALL EXISTING USER CODES
SET PRIVATE MODE (FOUR DIGIT CODES)	✓		[#] [Master Code]	09	[New User Code]	DELETES ALL EXISTING USER CODES
USER CODE FUNCTIONS						
CHANGE USER CODE		✓	[#] [Old User Code]	02	[New User Code] [New User Code]	USER CODE IS FOUR DIGITS.
OPEN LOCK	✓	✓	[User Code]			
CLOSE LOCK	✓		[User Code]		[User Code] [User Code]	
CLOSE LOCK		AUTO				RE-LOCKS AUTOMATICALLY AFTER 4 SECONDS OR WHEN HANDLE CLOSED
FUNCTIONS AVAILABLE TO ALL CODES						
BATTERY CHECK	✓	✓	[#] [#]			REPLACE BATTERIES IF RED LIGHT SHOWS
NOTES						BATTERY CONDITION INDICATOR
ALL ACCEPTABLE BUTTON PRESSES ARE SIGNIFIED BY A GREEN LIGHT.						GREEN LIGHT - EXCELLENT
						AMBER LIGHT - GOOD
						RED LIGHT - LOW
INCOMPLETE FUNCTIONS "TIME-OUT" AFTER 4 SECONDS.						
ERRORS AND "TIME-OUTS" ARE SIGNIFIED BY FLASHING RED LIGHT.						RED LIGHT –
						CHANGE BATTERIES AS SOON AS POSSIBLE
FOLLOWING AN ERROR OR "TIME-OUT", UNIT REVERTS TO PREVIOUS SETTINGS.						WHEN BATTERIES ARE LOW
						RED LIGHT WILL FLASH DURING LOCK / UNLOCK
WHEN HANDLE IS TURNED TO LOCKED POSITION AMBER LIGHT FLASHES.						
MASTER CODE (8 digits)				USER CODE (4 DIGITS)		
<div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div>				<div><div></div><div></div><div></div><div></div></div>		
ENSURE THAT YOU CHANGE THE DEFAULT MASTER CODE TO YOUR OWN MASTER CODE AND KEEP A SAFE RECORD - IT IS NOT POSSIBLE TO PROGRAM THE LOCK WITHOUT IT						

Euro-Locks SA NV (Belgium)

E: sales@euro-locks.be
T: +32 61 212.261

Euro-Locks SA (France)

E: euro-locks@euro-locks.fr
T: +33 (0)3.87.92.61.11

Euro-Locks Sicherheitseinrichtungen GmbH (Germany)

E: vertrieb@euro-locks.de
T: +49 (0) 6897 9072 0

Euro-Locks Sp. z o. o. (Poland)

E: sekretariat@euro-locks.pl
T: +48 (32) 344-78-70, -82, -84

W: www.loweandfletcherinc.com