



USER INSTRUCTIONS

3760 **Digital Combination Lock**

For full fitting, operating and
programming instructions please visit
www.euro-locks.com

Euro-Locks SA NV (Belgium)

E: sales@euro-locks.be

T: +32 61 212.261

Euro-Locks SA (France)

E: euro-locks@euro-locks.fr

T: +33 (0)3.87.92.61.11

Euro-Locks Sicherheitseinrichtungen GmbH (Germany)

E: vertrieb@euro-locks.de

T: +49 (0) 6897 9072 0

Euro-Locks Sp. z o. o. (Poland)

E: sekretariat@euro-locks.pl

T: +48 (32) 344-78-70, -82, -84

Public Mode

Turn Handle to Locked Position

Lock

Unlock

USER CODE



USER CODE



USER OR
MASTER CODE



Private Mode

Unlock

Change User
Code

USER OR
MASTER CODE



Lock

Turn to Lock
Position



#



OLD USER CODE



02



NEW USER CODE



NEW USER CODE



Error



Errors will time-out after 4 seconds.

Unfinished instructions will time-out after 4 seconds.

Always wait for LED lights to finish before pressing next key.