


Battery Replacement



378 - Series

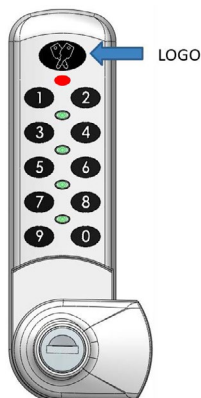

To check if the batteries require replacement press LOGO button twice (three times with RFID versions).

Batteries require changing if RED light flashes.

If the RED light flashes immediately prior to unlocking, the batteries must be changed as soon as possible.



Instructions - Dry Area Locks Only

- Step 1** Enter USER code or Over-ride key to gain access to the rear of the door.
- Step 2** Remove two fixing screws.
- Step 3** Rotate lock as shown.
- Step 4** Replace batteries.
- Step 5** Re-fit fixing screws.

Low & Fletcher Ltd (UK)

E: sales@lowe-and-fletcher.co.uk

T: +44 (0) 121 505 0400

Euro-Locks SA (France)

E: euro-locks@euro-locks.fr

T: +33 (0)3.87.92.61.11

Euro-Locks Sicherheitseinrichtungen GmbH (Germany)

E: vertrieb@euro-locks.de

T: +49 (0) 6897 9072 0

Low & Fletcher Inc (USA)

E: sales@loweandfletcherinc.com

T: +44 (0) 121 505 0400

Euro-Locks SA NV (Belgium)

E: sales@euro-locks.be

T: +32 61 212.261

Euro-Locks Sp. z o. o. (Poland)

E: sekretariat@euro-locks.pl

T: +48 (32) 344-78-70, -82, -84