

## Battery Replacement

### **Digital Combination Locks 3780/2/4 Only**

For full fitting, operating and  
programming instructions please  
visit [www.euro-locks.com](http://www.euro-locks.com)

#### **Euro-Locks SA NV (Belgium)**

E: [sales@euro-locks.be](mailto:sales@euro-locks.be)

T: +32 61 212.261

#### **Euro-Locks SA (France)**

E: [euro-locks@euro-locks.fr](mailto:euro-locks@euro-locks.fr)

T: +33 (0)3.87.92.61.11

#### **Euro-Locks Sicherheitseinrichtungen GmbH (Germany)**

E: [vertrieb@euro-locks.de](mailto:vertrieb@euro-locks.de)

T: +49 (0) 6897 9072 0

#### **Euro-Locks Sp. z o. o. (Poland)**

E: [sekretariat@euro-locks.pl](mailto:sekretariat@euro-locks.pl)


T: +48 (32) 344-78-70, -82, -84

# 378- Battery Replacement

To check if the batteries require replacement press LOGO button twice (three times with RFID versions).

Batteries require changing if RED light flashes.

If the RED light flashes immediately prior to unlocking, the batteries must be changed as soon as possible.

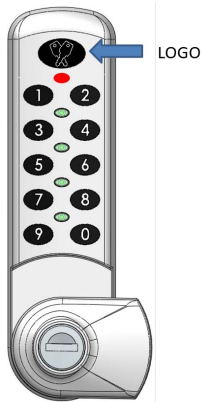

## Instructions - Dry Area Locks Only

1. Enter USER code or Over-ride key to gain access to the rear of the door.
2. Remove two fixing screws.
3. Rotate lock as shown.
4. Replace Batteries.
5. Re-fit fixing screws

