

General Maintenance



378 - Series

The 378-series locks will function for many years with no special maintenance. However, following some basic procedures will improve its performance.



Batteries

Battery usage is minimal. Pressing the "logo" button twice (three times for RFID locks) will give an indication of battery condition. Change the batteries if the RED LED flashes.

Also, a flashing LED light immediately prior to unlocking indicates a low battery. If this happens, change the batteries as soon as possible.

Refer to the battery replacement instructions.

Cleaning

A build up of dirt around commonly used buttons (particularly in Private Mode) will give an un-authorized user an indication of the code being used. It is an advantage to keep the lock clean.

Clean the lock by using a soft cloth and a light application of Isopropyl Alcohol (IPA Cleaner) or soapy water.

Disinfect the lock by using a soft cloth and a light application of bleach solution.

Keep the amount of liquid applied to a minimum. Do not allow liquids to enter the lock.

Lubrication

If required, the over-ride lock may be lubricated using a small quantity of a light lock oil. Apply this to the lock by adding the oil to the over-ride key and inserting this into the lock a few times.

Do not apply oil directly to the lock cylinder.

Low & Fletcher Ltd (UK)

E: sales@lowe-and-fletcher.co.uk

T: +44 (0) 121 505 0400

Euro-Locks SA (France)

E: euro-locks@euro-locks.fr

T: +33 (0)3.87.92.61.11

Euro-Locks Sicherheitseinrichtungen GmbH (Germany)

E: vertrieb@euro-locks.de

T: +49 (0) 6897 9072 0

Low & Fletcher Inc (USA)

E: sales@loweandfletcherinc.com

T: +44 (0) 121 505 0400

Euro-Locks SA NV (Belgium)

E: sales@euro-locks.be

T: +32 61 212.261

Euro-Locks Sp. z o. o. (Poland)

E: sekretariat@euro-locks.pl

T: +48 (32) 344-78-70, -82, -84